



Diamond products for
FINISHING & POLISHING STONE



**abrasive
technology**

www.abrasive-tech.com



SLABMASTER™

Slabmaster™ diamond discs

- Exceeds original factory finish on granite and marble.
- Quick grit changes.
- Fits most radial arm machines.
- Large pin attachment.
- Very few steps to final finish.

Grit	SLABMASTER™		
	8" (Slide pin - Granite)	10" (Large pin) 7 1/4" between pins	10" (Slide pin) 4 1/2" between pins
	Part No.	Part No.	Part No.
30 X Coarse	-	-	-
#1 (30)	C6750201	C6750001	C6750101
#2 (50)	C6750202	C6750002	C6750102
#3 (120)	C4750203	C4750003	C4750103
#4 (220)	C4750204	C4750004	C4750104
#5 (400)	C4750205	C9751004	C9751104
#6 (800)	C4750206	C9751005	C9751105
Granite buff	C9201207	C9751006	C9751106
Marble buff	-	C9751008	C9751108
Complete System	C9751200	C9751000	C9751000



Finish Capabilities of Each Step

Grit	Comments
#1 (30)	For heavy grinding.
#2 (50)	Perfect to break an existing finish for a repair.
#3 (120)	Leaves a honed finish. If any large scratches are visible, go to #2.
#4 (220)	Leaves a dull polish. No scratches should be visible.
#5 (400)	Low gloss polish. Use more pressure than with #4.
#6 (800)	Medium gloss polish. Use same pressure as with #5.
#7 (1800)	High gloss polish. Use with high pressure and low water.
#8 (3500)	Marble felt buffing disc. For wet or dry use.



Air Gauge Settings

Grit	8" System for Granite*			10" System for Granite			Marble
	Soft	Med	Hard	Soft	Med	Hard	
#1 (30)	50	75	100	100	150	200	50
#2 (50)	75	100	125	150	200	250	50
#3 (120)	75	100	125	150	200	250	-
#4 (220)	100	125	150	200	250	300	50
#5 (400)	100	125	150	200	250	300	-
#6 (800)	150	200	250	300	400	500	-
#7 (1800)	75	100	125	150	200	250	-
#8 (3500)	-	-	-	-	-	-	50

*8" System is not for use on marble.



P.B.S.® FORM TOOLS

P.B.S.® Clean Up Diamond Form Tools

- For cleaning up stone edges after any cutting operation.
- Very rapid stock removal under harsh conditions.
- Available for CNC sleeves or gas adaptor.
- Also available with a template bearing for radial arm machines.
- Added cove for grinding sharp edges to prevent scratching an almost finished countertop.
- Special shapes and sizes are available upon request.
- Can be replated with new diamonds.



SUPER-ROK™

Super-Rok™ diamond discs


Extremely rugged due to P.B.S.® braze bond technology. Rapid material removal makes it an excellent all around grinding tool for all hard materials.

- For concrete, granite, marble, limestone.
- Perfect for installation crews and fabrication shops.

- Ideal for grout chasing, fitting and shaping edges, roughing, texturing and surfacing.
- Can be used wet or dry.
- Available in many diameters, in formed or mounted versions.



SUPER-ROK™		
Grit	4" (5/8"-11 Mounted)	7" (Formed)
	Part No.	Part No.
40	C3440088N	C3410579N
100	C3440089N	
5/8"-11 Adaptor for 7" formed		C915P2222

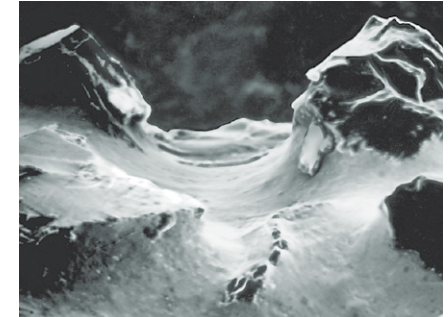

P.B.S.® braze bond. Crystals are permanently attached.



P.B.S.® ROUTERS

P.B.S.® diamond routers for marble

- For construction grade 1/2" diameter spindle routers and tile saws.
- P.B.S.® technology produces an aggressive tool that profiles stone quickly without loading and offers extended life over normal routers.

- Use immediately after a sawing or rough shaping operation to prepare the surface for final finishing.
- May be used wet or dry. Wet usage extends the tool life.



P.B.S.® ROUTERS					
Shape	Shaft Dia. & Length	Stone Thickness	Radius	O.D.	Abrasive Length
Straight	1/2" x 2"	-	Flat	3/8"	1"
Straight	1/2" x 2"	-	Flat	1/2"	1"
Straight	1/2" x 2"	-	Flat	5/8"	1"
Straight	1/2" x 2"	-	Round	3/8"	1"
Straight	1/2" x 2"	-	Round	1/2"	1"
Straight	1/2" x 2"	-	Round	5/8"	1"
Demi-Bull	1/2" x 2"	3/4"	3/8"	2"	-
Demi-Bull	1/2" x 2"	1-1/2"	3/4"	2"	-
Full-Bull	1/2" x 2"	3/4"	3/8"	2"	-
Full-Bull	1/2" x 2"	1-1/2"	3/4"	2"	-

P.B.S.® SINKHOLE TOOLS	METAL BOND SINKHOLE TOOLS FOR GRANITE
Size and grit	Shape and size
3/8" x 3/8" demi-bull	Demi-bull 3/8 x 3/16
1/2" x 1/2" demi-bull	45° 3/8 x 45°
	Demi-bull 1/2 x 1/4



Electroplated bond. Crystals can come out.



P.B.S.® SINKHOLE TOOLS

Size and grit

- 1" x 2-1/4" gas
- 2" x 2" gas
- 50 x 35 mm, #50
- 50 x 35 mm, #200
- 50 x 35 mm, #400
- 40 x 30mm #50
- 40 x 30mm #200
- 3" edge #50
- 3" edge w/cove #50
- 3" edge #80
- 4" drainboard

***Call for product pricing and availability**



STRAIGHT-EDGE™

Straight-Edge™ diamond discs

- For 4" automatic edging machinery.
- For polishing straight edges on "C-Frame" machinery.
- Eliminates workpiece end scratches and delivers a better finish faster than any other tool.
- Perfect for edges 3/4" or thicker.
- Set includes a buffing disc for an extra rich color depth and high gloss finish on granite.



STRAIGHT-EDGE™ 4" (Snail lock)								
Grit	Color Code	Part No.	Operating Guidelines					
			Marble	Granite	Travel Speed Ft/min	Passes	Pressure	
							2cm thick	3cm or more
Cupwheel (F)	●	C634002	●	●	65	6	50	65
#1	●	C475001	●	●	30	6	50	65
#2	●	C475002	-	●	30	6	50	65
#3	●	C975003	-	●	30	6	50	65
#4	●	C975004	-	●	30	6	50	65
#5	●	C975005	-	●	30	6	50	65
Set of 6 grits		C975400	-	-	-	-	-	-



METAL BOND CUPWHEELS



SUPER-EDGE™ 4"



SUPER-EDGE™ 5 STEP

METAL BOND CUPWHEELS 4" (1/2" hole) (Snail lock)		
Grit	Color Code	Part No.
50	●	C634001
150	●	C634002



SUPER-EDGE™ 5 STEP 4" (Female Hook and Loop)							
Grit	Color Code	Part No.	Est. Life lin. ft.	Spindle Press. lb/in2	Travel Speed ifm	Start Stop angle	Miter Angle
Cupwheel (C)	●	C634001	2000	Hard Stop	50	4-176	6.0
Cupwheel (F)	●	C634002	4000	Hard Stop	100	0-180	2.6
Step 3	●	C911D4153	1000	50	100	4-176	2.4
Step 4	●	C911D4154	1200	50	100	4-176	2.2
Step 5	●	C911D4155	2000	50	100	20-160	2.0



SUPER-EDGE™										
Grit	Color Code	4" (Female Hook and Loop)	4" (Snail lock)	Operating Guidelines						
		Part No.	Part No.	Granite			Marble	Operating Pressure lb/in2	Travel Speed Lfpm	Est. Life Lin. Ft.
				Black	Med.	Light				
50	●	C911D4120	C911D4220	-	●	-	-	30	85	300
120	●	C911D4122	C911D4222	●	-	-	-	30	85	500
220	●	C911D4123	C911D4223	●	●	●	●	30	85	800
400	●	C911D4124	C911D4224	●	●	-	-	30	85	1000
800	○	C911D4126	C911D4226	-	-	●	●	30	85	1200
1800	●	C911D4127	C911D4227	●	●	-	-	35	85	1500
3500	●	C911D4128	C911D4228	●	●	●	●	35	85	2000

Metal Bond Cupwheels

- Specifically for automatic edging machines.
- Snail lock mounting plate for quick and easy grit changes.
- Available in x-coarse, coarse, medium, and fine grit sizes.
- Color coded for easy identification.
- For marble or granite.
- Will shape full bullnose profiles and calibrate straight edges.
- Water diffuser for uniform water dispersion to the work area.

Super-Edge™ 4" diamond discs

- For new generation, high-production C-frame machinery.
- Faster than competing polishing systems.
- Low abrasive and labor production costs.
- For marble, granite, synthetic and agglomerated stones.
- Use immediately after any moderately coarse metal bond shaping diamond tool to speed up the finishing process and to reduce or eliminate need for rework.
- No final buff is required, and the gloss achieved will exceed the surface polish.
- Available with hook and loop or rigid snail-lock backing.

Super-Edge™ 5 Step diamond discs

- Only 5 steps for complete curved edge processing on automatic machines.
- Produces a finished product in the fastest time possible.
- Redesigned for faster cutting.
- Three rugged resin polishing discs that match or exceed the existing surface polish.
- Much faster and more cost effective than conventional discs.
- Slightly over 300 passes for a finished bullnose edge compared to 500 with regular tools.
- Hook and loop snail-lock holder saves time and eliminates hard stop adjuster when switching from metal hard stop to pressure polishing settings.



SUPER-EDGE™ 5"

Super-Edge™ 5" and 6" diamond discs

- For all in-line multihead automated edge polishing machinery.
- For polishing marble, granite, synthetic stones, and agglomerated stones.
- Use immediately after a metal bond forming tool to speed up the finishing process and to reduce or eliminate costly rework.
- Super-Edge™ diamond discs produce a better finish in fewer passes than any other tool.
- No final buff is required.



SUPER-EDGE™ (Snail lock)									
Grit	Color Code	5"	6"	Number of Heads / Finish Quality					
		Part No.	Part No.	5 / Best	5 / Fast	6 / Best	6 / Fast	7 / Best	7 / Fast
50	●	C911D5200	C911D6200	●	●	●	●	●	●
120	●	C911D5202	C911D6202	●	●	●	●	●	●
220	●	C911D5203	C911D6203	●	●	●	●	●	●
400	●	C911D5204	C911D6204	-	●	-	●	●	●
600	●	C911D5205	C911D6205	●	-	●	-	●	-
800	○	C911D5206	C911D6206	-	●	●	●	●	●
1800	●	C911D5207	C911D6207	●	-	-	●	●	●
3500	●	C911D5208	C911D6208	-	-	●	-	-	●



SUPER-EDGE™ PLUS

Super-Edge™ Plus 5" and 6" diamond discs

- Same performance advantages of Super-Edge™.
- **New!** Pigmentation has been removed from the diamond section to alleviate color transfer onto natural and synthetic surfaces.
- Color coding for easy identification is now located in the support side of disc.
- Supports fitted with three radial holes to facilitate locking the disc to ease the removal operation.



SUPER-EDGE™ Plus (Snail lock)									
Grit	Color Code	5"	6"	Number of Heads / Finish Quality					
		Part No.	Part No.	5 / Best	5 / Fast	6 / Best	6 / Fast	7 / Best	7 / Fast
50	●	C9110001	C9110011	●	●	●	●	●	●
120	●	C9110002	C9110012	●	●	●	●	●	●
220	●	C9110003	C9110013	●	●	●	●	●	●
400	●	C9110004	C9110014	-	●	-	●	●	●
600	●	C9110005	C9110015	●	-	●	-	●	-
800	○	C9110006	C9110016	-	●	●	●	●	●
1800	●	C9110007	C9110017	●	-	-	●	●	●
3500	●	C9110008	C9110018	-	-	●	-	-	●

Super-Edge™ 5" and 6" Hybrid and Metal Bond discs

The hybrid tools combine the best of resin and metal bonds. They grind very fast yet leave an exceptionally fine finish while lasting a long time. When inserted in your current lineup of polishing discs, they will increase your current production on any existing inline polishing machine.




HYBRID



S4750304	Super-Edge™ 6" Coarse Hybrid Snaillock
S475001	Super-Edge™ 6" Fine Hybrid Snaillock
S4750305	Super-Edge™ 5" Coarse Hybrid Snaillock
S475002	Super-Edge™ 5" Fine Hybrid Snaillock

A new Hybrid fine grit replaces normal #50 & #120 grits. With the extra spindle, we recommend doubling up on #220 Super-Edge™ grits for the best possible finish with darkest depth of color. If more removal than fine grit is needed, use Coarse. In both cases reduce operating pressure to minimal setting to avoid excessive removal.

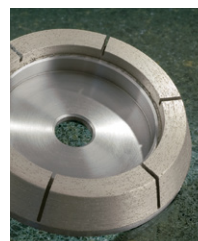

Metal Bond Wheels




- Standard four screw mount for Velocity and Fastback machines. Mounts for Montresor and other brands are also available.

CAUTION: When converting from SiC bricks to diamond tools, the spindle bearings may need to be replaced first. Vibration produced by excessive wear from traditional abrasives will cause erratic performance with the diamond tools.

METAL BOND WHEELS - Corner removal, thickness gauging, bullnose shaping.
(4-1/4" x 20 screws on a 4.21" bolt circle)

Size	Part No.
5" (w/ screw mounts)	S6750067
5" snail-lock adaptor	C915P500
6" (w/ screw mounts)	S6750090
6" snail-lock adaptor	C915P600

METAL BOND

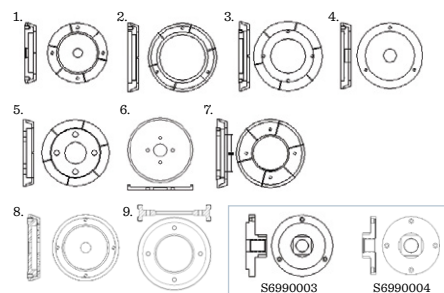

1. S6750067 Park Velocity 5" Calibrator (All) #50
2. S6750089 Montresor 5" Thick & Corner Grind #50
3. S6750090 Park Velocity 6" Thick & Corner Grind #50
4. S6750093 Bullnose Shaper 5" #50 (Need S6990003 Adaptor)
5. S6750094 Corner Grinder #50
6. S6750095 10" Thickness Calibrator #50
7. S6750096 Park Velocity 6" Smart Spindle #50
8. S6750097 Bullnose Shaper 5" #50 (Need S6990004 Adaptor)
9. S6750085 4" Face Milling Cutter

S6990001	Holder 1/2" Gas For Milling Cutter	S6990003	M30 Adaptor For S6750093
S6990002	Holder 5/8" X 11" For Milling Cutter	S6990004	5" M30 X 3.5 Adaptor, 3 Holes For S6750097

ELECTROPLATED TOOLS

Electroplated tools are cool cutting despite their high removal rates and leave no distortion of the workpiece surface. These tools save production time and deliver consistent finishes. Electroplated flexible tools require minimal operator effort yet promote more throughput to increase productivity. They are long lasting and reduce tooling costs. Hook and loop backing is standard and allows for quick grit changes.



GENESIS™

Genesis™ diamond discs

- Grind, hone and polish surfaces to a smooth finish.
- They work well on almost all hard surfaces and substances such as: glass, ceramics, stone, plastics, concrete and composites.
- Discs and pads are stocked in many sizes.
- Special order up to 24" diameter with hook and loop, PSA and magnetic backing.



GENESIS™ (With female hook and loop)								
Grit	3" (No hole) Part No.	4" (No hole) Part No.	4" (5/8" hole) Part No.	5" (No hole) Part No.	5" (5/8" hole) Part No.	7" (7/8" hole) Part No.	12" X 12" Part No.	12" X 12" (no back) Part No.
70	C911G3101	C911G4101	C911G4201	C911G5101	C911G5201	C911G7201	C914S2001	C914S1001
120	C911G3102	C911G4102	C911G4202	C911G5102	C911G5202	C911G7202	C914S2002	C914S1002
220	C911G3103	C911G4103	C911G4203	C911G5103	C911G5203	C911G7203	C914S2003	C914S1003
400	C911G3104	C911G4104	C911G4204	C911G5104	C911G5204	C911G7204	C914S2004	C914S1004
600N*	C911G3105N	C911G4105N	C911G4205N	C911G5105N	C911G5205N	C911G7205N	-	-
600R	C911G3105R	C911G4105R	C911G4205R	C911G5105R	C911G5205R	C911G7205R	C914S2005	C914S1005
800	C911G3106	C911G4106	C911G4206	C911G5106	C911G5206	C911G7206	C914S2006	C914S1006
1800	C911G3107	C911G4107	C911G4207	C911G5107	C911G5207	C911G7207	C914S2007	C914S1007
3500	C911G3108	C911G4108	C911G4208	C911G5108	C911G5208	C911G7208	C914S2008	C914S1008
Set (8 Grits)	C911G310R	C911G410R	C911G420R	C911G510R	C911G520R	C911G720R	-	-

* Not included in sets.




BABY ROK™

Baby-Rok™ diamond discs

- Semi-flexible and well suited for demanding surface grinding applications.
- They will grind almost any material at incredible stock removal rates, leaving a surface ground to desired size and geometry.
- Ideal for removing deep scratches in stone, glass or composites left by sawblades during cutting or for exposing aggregates in concrete.



BABY ROK™ (Semi rigid - with female hook and loop)				
Grit	3" (1-1/4" hole) Part No.	4" (1-3/4" hole) Part No.	5" (2-3/4" hole) Part No.	7" (4-1/4" hole) Part No.
30	C911R30303	C911R40303	C911R50303	C911R70303
50	C911R3030	C911R4030	C911R5030	C911R7030
70	C911R3031	C911R4031	C911R5031	C911R7031
120	C911R3032	C911R4032	C911R5032	C911R7032
220	C911R3033	C911R4033	C911R5033	C911R7033
400	C911R3034	C911R4034	C911R5034	C911R7034

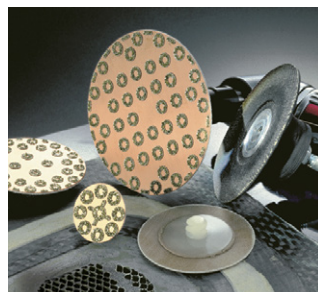

TECH-LOK™

Tech-Lok™ diamond discs


- Similar grit configuration to Baby-Rok™.
- Attach quickly with twist lock adapters.



TECH-LOK™			
Grit	1" Part No.	2" Part No.	3" Part No.
30	C911R10403	C911R20403	C911R30403
50	C911R1040	C911R2040	C911R3040
70	C911R1041	C911R2041	C911R3041
120	C911R1042	C911R2042	C911R3042
220	C911R1043	C911R2043	C911R3043
400	C911R1044	C911R2044	C911R3044
Holder	C915P0010	C915P0020	C915P0030

RESIN BONDED TOOLS

Diamonds are impregnated throughout the entire depth of the tool. New diamond cutting points are continually exposed throughout the entire tool life. Resin polishing discs offer the best possible alternative for polishing difficult surfaces to a mirror finish. Hook and loop backing allows for quick grit changeovers.

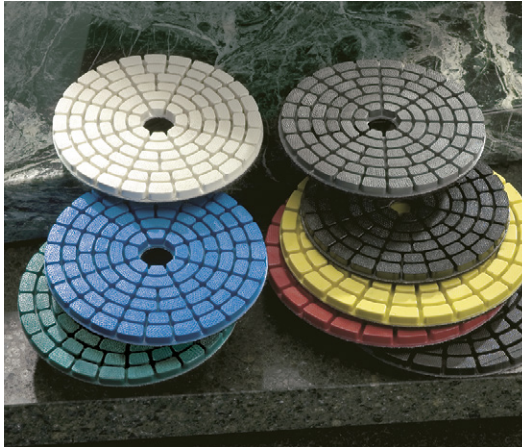

SHINE-X™

Shine-X™ diamond discs

- Our premium diamond polishing discs.
- Shine-X™ works extremely well on both marble and granite.
- Double thickness (4mm) for long life. This added thickness allows the discs to be self-opening.
- Works fast - typically only 4 passes per grit for all grit sizes.
- Buffing is generally required for dark stones.
- For the best performance with 4" disc, use 10 lb. of force for edges 3/4" or less and 20 lb. for thicker.
- Set water flow just enough not to run the polishing discs dry.



SHINE-X™ (With female hook and loop, 5/8" hole)				
Grit	Color Code	3"	4"	5"
		Part No.	Part No.	Part No.
50	●	C911D3300	C911D4300	C911D5300
120	●	C911D3302	C911D4302	C911D5302
220	●	C911D3303	C911D4303	C911D5303
400	●	C911D3304	C911D4304	C911D5304
800	○	C911D3306	C911D4306	C911D5306
1800	●	C911D3307	C911D4307	C911D5307
3500	●	C911D3308	C911D4308	C911D5308
Set (7 Grits)		C911D330D	C911D430D	C911D530D



SUPER-DIASHINE™

Super-Diashine™ diamond discs

- High flexibility diamond discs.
- Highest quality finish on granite and marble with minimal effort at the lowest cost possible.
- Only light pressure is required to achieve excellent results, due to the free cutting action of the diamonds.
- Produce a high, monument quality finish in a fraction of the normal time.



SUPER-DIASHINE™ (With female hook and loop)			
Grit	Color Code	3" (1-3/8" hole)	4" (1-1/2" hole)
		Part No.	Part No.
50	●	C911D3500	C911D4500
120	●	C911D3502	C911D4502
220	●	C911D3503	C911D4503
400	●	C911D3504	C911D4504
800	○	C911D3506	C911D4506
1800	●	C911D3507	C911D4507
3500	●	C911D3508	C911D4508
Set (7 Grits)		C911D350D	C911D450D

Diamond handpads and strips excel at abrading marble, granite, agglomerated stone, concrete, ceramics, glass and composites. Available in both firm or flexible bases, their ideal hand size allows the finishing of surface shapes and areas that are hard to reach with power tools.

Handpads

- Easy-to-grip foam base covered by a layer of diamond.
- Available with either Genesis™ or Rok™ diamond layer to suit any application.



HANDPADS

Strips

- Each strip is individually backed with loop material.
- Can be attached to the hook backed Handblock™ base or used as is for maximum flexibility.



HANDPADS 2-1/4" X 4" X 1-1/8"				STRIPS (Female H & L) 2-1/4" X 4"
Grit	Color Code	GENESIS™ Part No.	ROK™ Part No.	GENESIS™ Part No.
50	●	-	C913H1040	-
70	●	C913H1011	C913H1041	C912H3111
120	●	C913H1012	C913H1042	C912H3112
220	●	C913H1013	C913H1043	C912H3113
400	●	C913H1014	-	C912H3014
600R	●	C913H1015R	-	C912H3015R
800	○	C913H1016	-	C912H3016
1800	●	C913H1017	-	C912H3017
3500	○	C913H1018	-	C912H3018
Set (8 Grits)		C913H101R	-	C912H301R
600N	●	C913H1015N	-	C912H3015N
Handblock™		-	-	C915TH3099



TURBO-ROK™

Turbo-Rok™ Lippage Tools

- Rugged electroplated Rok™ discs mounted onto a plastic chamfered support with a hook fastener base.
- Fits all machines that use hook and loop attachments.



TURBO-ROK™ Diamond lippage removal discs For the 13", 17", 20" Systems

Grit	Part No.
30	C911T30103
70	C911T3011



BELTS

Diamond Belts

- Duragrit™ and Polyzrez™ diamond belts are designed to replace conventional abrasive belts.
- For flat glass, ceramics, composites, laminated glass, mirrors, decorative glass, crystal, artistic glass, and scientific glass.
- Expanding drum belts are available.
- Custom sizes and grits are available.



DURAGRIT™ diamond belts				
Grit	1-1/8" x 21" Part No.	3" x 21" Part No.	3" x 24" Part No.	4" x 106" Part No.
70	C910B1911S†	C910B4911S†	C910B4811S†	C910B3301
120	C910B1912S†	C910B4912S†	C910B4812S†	C910B3302
220	C910B1913S†	C910B4913S†	C910B4813S†	C910B3303
400	C910B1914S†	C910B4914S†	C910B4814S†	-
4" x 7"	Graphite Pad	C915X0615		

†Package contains 2 pads per belt.



FLOORMASTER™

FloorMaster™ diamond discs

- For the floor restoration professional.
- Our top-of-line diamond discs for floors.
- Full 1/4" (6mm) thick diamond segments for extended life.
- Adaptable to any type of floor machinery.
- For marble, limestone, travertine, terrazzo and granite.



FLOORSHINE™

FloorShine™ diamond discs

- Value priced diamond tools for stone floors.
- Delivers high mechanical shine on compatible stones.
- Adaptable to any type floor machinery.
- Large disc sizes available for walls and handwork.
- For marble, travertine and terrazzo.

⚠			⚠			
		FLOORMASTER™	FLOORSHINE™			
Grit	Color Code	3"	3"	4"	5"	
#1 (30)	●	C911D38003	C911D30103	C911D40103	C911D50103	
#2 (50)	●	C911D3800	C911D3010	C911D4010	C911D5010	
#3 (120)	●	C911D3802	C911D3012	C911D4012	C911D5012	
#4 (220)	●	C911D3803	C911D3013	C911D4013	C911D5013	
#5 (400)	●	C911D3804	C911D3014	C911D4014	C911D5014	
#6 (800)	○	C911D3806	C911D3016	C911D4016	C911D5016	
#7 (1800)	●	C911D3807	C911D3017	C911D4017	C911D5017	
#8 (3500)	●	C911D3808	C911D3018	C911D4018	C911D5018	



DIA-GLO™

DIA-GLO™ buffing compounds

Dia-Glo™ buffing compounds are specifically formulated to achieve the best possible finish on stone surfaces. Easy to use, they never mark the stone in any way and yield incredibly high gloss finishes in a very short time. These compounds can be used in stone fabricating shops, for floor restoration and as a maintenance buffing compound.

- Dia-Glo™ M is for marble, terrazzo and agglomerated marble surfaces.
- Dia-Glo™ D is for dark colored granite. Its dark hue will not highlight the normal microscopic cracks on stone surfaces and will bring out the rich color and gloss on medium to dark stone.
- Dia-Glo™ L is for light colored granite.

DIA-GLO™ buffing compound						
Size	Marble	Color	Granite-Light	Color	Granite-Dark	Color
	Part No.	Code	Part No.	Code	Part No.	Code
1 liter	C920M003	●	C920GL03	m	C920GD03	●
10 liter	C920M024	●	C920GL24	m	C920GD24	●

DIA-GLO™ S buffing system

- Easily and rapidly restore gloss and color to black granite floors.
- A strong cutting action takes place with the combination of the stainless steel pad and the mixture of alkali powder and acidic liquid.
- Minor lippage does not need to be removed when using this system.
- Will restore black granite floors measuring as low as 20 points on a gloss-meter up to 80 or more points, with exceptional ease.

DIA-GLO™ S Diamond buffing system for black granite				
Size	Powder Part No.	Liquid Part No.	Item	Part No.
1 pt.	C920SP01	C920SL01	Fast working 17" SS pad	C915SS17
5 qt.	C920SP02	C920SL02	500 ft ² Kit	C920SKIT



FELT DISCS

Felt buffing discs

- Used to achieve the final high gloss finish after a polishing operation.
- Hook and loop backed,
- Only 1/4" hard density felt is used. Lower density felt does not produce the same results.
- When combined with Dia-Glo™ buffing compound, discs can be used on granite, marble or terrazzo surfaces.

FELT BUFFING DISCS	
Size	Part No.
3"	C938F3
4"	C938F4
5"	C938F5



BACKPLATES

Backplates

FLEXFOAM™ BACKPLATE 5/8" X 11" - Female thread insert (Centerhole - male hook & loop)

Size	Part No.
3"	C915P0301
4"	C915P0401
5"	C915P0501
7"	C915P0701

SNAIL LOCK BACKPLATE (Heavy duty w/male hook & loop)

Size	Part No.
4" x 1/2" thick	C915P0443
4" x 3/8" thick	C915P0441
5" x 3/8" thick	C915P0541

ALUMINUM HOLDER 5/8" X 11" - Female thread insert

Size	Part No.
100mm (4")	C915P0490
125mm (5")	C915P0590
150mm (6")	C915P0590

FLEXFOAM™ INSERT (Side A - male hook & loop) (Side B - female hook & loop)


Size	Part No.
3"	C915P3310
4"	C915P4440

BACKPLATE (with 1/4" mandrel) (No threads - male hook & loop)

Size	Part No.
3"	C915P0310
4"	C915P0410

TECH-LOK™ (1/4" mandrel)

Size	Part No.
1"	C915P0010
2"	C915P0020
3"	C915P0030

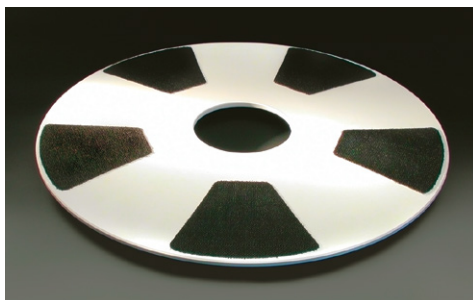

TECHPLATES™

Techplates™ attachment plates for diamond tools

- These plates eliminate waviness and greatly increase the shine quality of the finished floor by providing a completely flat attachment surface for diamond tools.
- They pay for themselves in diamond savings, eliminated reworks and repeatability of work.
- 17" diameter is standard. Other sizes available upon request.

TECHPLATES™	
Size	Part No.
17"	C915P1701

Carving ⚠


PRODIA™ CARVING TOOLS (.092 shank diameter)					
Shape	Part No.	Shape	Part No.	Shape	Part No.
A	CD03072C	G	CD03063C	N	CD03021M
B	CD03064C	H	CD03069C	O	CD03060M
C	CD03011M	J	CD03065C	P	CD03044M
D	CD03030M	K	CD03010M	Q	CD03038M
E	CD03015M	L	CD03073C	R	CD03043M
F	CD03023M	M	CD03022M		

***CALL FOR AVAILABILITY**

Attaching ⚠

HOOK AND LOOP MATERIAL (no hole)				
Item	Male Part No.		Female Part No.	
	PSA backing	Plain backing	PSA backing	Plain backing
3" disc	C915V3230	C915V3200	C915V3130	C915V3100
4" disc	C915V4230	C915V4200	C915V4130	C915V4100
12" square	C915V1223	C915V1220	C915V1213	C915V1210

PRODIA™ CARVING TOOLS



2022 STONE PRICE LIST

For most recent pricing, go to www.abrasive-tech.com
Prices and product specifications are subject to change without notice.

Part #	DESCRIPTION	2022 \$Price
C2010031006Z	*.030 MNDRL 5-PACK 220 DIA	70.81
C2010040001Z	*.040 MNDRL 5-PACK 220 CBN	65.98
C2010041001Z	.040 MNDRL 5-PACK 220 CBN	65.98
C2010041006Z	*.040 MNDRL 5-PACK 220 DIA	65.98
C2010061008Z	*.060 MNDRL 5-PACK 100 DIA	65.98
C2010070003Z	*.070 MNDRL 5-PACK 100 CBN	65.98
C2010070008Z	*.070 MNDRL 5-PACK 100 DIA	65.98
C2010080003Z	*.080 MNDRL 5-PACK 100 CBN	67.59
C2010080008Z	*.080 MNDRL 5-PACK 100 DIA	67.59
C2010090003Z	*.090 MNDRL 5-PACK 100 CBN	70.81
C2010090008Z	*.090 MNDRL 5-PACK 100 DIA	70.81
C2010100003Z	*.100 MNDRL 5-PACK 100 CBN	72.42
C2010100008Z	*.100 MNDRL 5-PACK 100 DIA	72.42
C2010110001Z	*.110 MNDRL 5-PACK 220 CBN	67.59
C2010110003Z	*.110 MNDRL 5-PACK 100 CBN	75.63
C2010118003Z	*.118 MNDRL 5-PACK 100 CBN	80.47
C2010118008Z	*.118 MNDRL 5-PACK 100 DIA	80.47
C2010135001Z	*.135 MNDRL 5-PACK 220 CBN	106.22
C2010135003Z	*.135 MNDRL 5-PACK 100 CBN	98.18
C2010135008Z	*.135 MNDRL 5-PACK 100 DIA	98.18
C2010157001Z	*.157 MNDRL 5-PACK 220 CBN	114.26
C2010157003Z	*.157 MNDRL 5-PACK 100 CBN	105.69
C2010157008Z	*.157 MNDRL 5-PACK 100 DIA	106.22
C2010177001Z	*.177 MNDRL 5-PACK 220 CBN	110.00
C2010177003Z	*.177 MNDRL 5-PACK 100 CBN	115.31
C2010197003Z	*.197 MNDRL 5-PACK 100 CBN	125.53
C2020203003Z	*.203 MNDRL 2 PACK 100 CBN	51.49
C2020203005Z	*.203 MNDRL 2 PACK 60 CBN	64.37
C2020203008Z	*.203 MNDRL 2 PACK 100 DIA	51.49
C2020230001Z	*.230 MNDRL 2 PACK 220 CBN	59.56
C2020230003Z	*.230 MNDRL 2 PACK 100 CBN	54.45
C2020230008Z	*.230 MNDRL 2 PACK 100 DIA	54.72
C2020275003Z	*.275 MNDRL 2 PACK 100 CBN	59.56
C2020275005Z	*.275 MNDRL 2 PACK 60 CBN	73.67
C2020275008Z	*.275 MNDRL 2 PACK 100 DIA	59.56
C2020315001Z	*.315 MNDRL 2 PACK 220 CBN	67.59
C2020315003Z	*.315 MNDRL 2 PACK 100 CBN	64.37
C2020315005Z	*.315 MNDRL 2 PACK 60 CBN	80.47
C2020335003Z	*.335 MNDRL 2 PACK 100 CBN	67.26
C2020335005Z	*.335 MNDRL 2 PACK 60 CBN	76.86
C2020394003Z	*.394 MNDRL 2 PACK 100 CBN	77.24
C2020395003Z	*.394 MNDRL 2 PACK 100 CBN	90.56

Part #	DESCRIPTION	2022 \$Price
C2020395005Z	*.394 MNDRL 2 PACK 60 CBN	94.96
C2020395008Z	*.394 MNDRL 2 PACK 100 DIA	90.12
C2020437003Z	*.437 MNDRL 2 PACK 100 CBN	97.67
C2020437005Z	*.437 MNDRL 2 PACK 60 CBN	120.71
C2020500003Z	*.500 MNDRL 2 PACK 100 CBN	103.00
C2020500008Z	*.500 MNDRL 2 PACK 100 DIA	103.00
C2030394001Z	*.394 MNDRL X .394 ABR X 3/8 220 CBN	71.97
C2030394003Z	*.394 MNDRL X .394 ABR X 3/8 100 CBN	45.06
C2030394005Z	*.394 MNDRL X .394 ABR X 3/8 60 CBN	48.28
C2030394008Z	*.394 MNDRL X .394 ABR X 3/8 100 DIAMOND	45.06
C2030473001Z	*.473 MNDRL X .394 ABR X 3/8 220 CBN	53.11
C2030473003Z	*.473 MNDRL X .394 ABR X 3/8 100 CBN	48.28
C2030473005Z	*.473 MNDRL X .394 ABR X 3/8 60 CBN	56.33
C2030500003Z	*.500 MNDRL X .500 ABR X 3/8 100 CBN	57.97
C2030500005Z	*.500 MNDRL X .500 ABR X 3/8 60 CBN	64.06
C2030500008Z	*.500 MNDRL X .500 ABR X 3/8 100 DIAMOND	59.56
C2030591003Z	*.591 MNDRL X .394 ABR X 3/8 100 CBN	62.76
C2030591005Z	*.591 MNDRL X .394 ABR X 3/8 60 CBN	77.24
C2030730003Z	*.730 MNDRL X .394 ABR X 3/8 100 CBN	72.42
C2030730005Z	*.730 MNDRL X .394 ABR X 3/8 60 CBN	91.72
C2030730008Z	*.730 MNDRL X .394 ABR X 3/8 100 DIAMOND	72.42
C2031000003Z	*1.00 MNDRL X .394 ABR X 3/8 100 CBN	91.72
C2031000005Z	*1.00 MNDRL X .394 ABR X 3/8 60 CBN	113.71
C2031000008Z	*1.00 MNDRL X .394 ABR X 3/8 100 DIAMOND	91.72
C2031250003Z	*1.25 MNDRL X .394 ABR X 3/8 100 CBN	103.62
C2031250005Z	*1.25 MNDRL X .394 ABR X 3/8 60 CBN	125.60
C2031500003Z	*1.50 MNDRL X .394 ABR X 3/8 100 CBN	120.71
C2031500005Z	*1.50 MNDRL X .394 ABR X 3/8 60 CBN	154.48
C3209999001N	P.B.S.® RTR 3/8 X 1 X 1/2 X 3 40 GRIT	86.99
C3209999002N	*P.B.S.® RTR 1/2 X 1 X 1/2 X 3 40 GRIT	87.09
C3209999003N	P.B.S.® RTR 5/8 X 1 X 1/2 X 3 40 GRIT	98.71
C3209999004N	P.B.S.® BALL RTR 3/8 X 1 X 1/2 X 3 40 G	94.84
C3240001N	P.B.S.® MTD WHL 2.81" X 1.56" X SH 80 G	695.51
C3289999001N	P.B.S.® DBULL 2 X 1/2 X 1/2 R3/8 40 GRIT	143.50
C3440088N	P.B.S.® SUPER-ROK™ 4" 5/8"-11 MTD 40 G	791.78
C3440089N	P.B.S.® SUPER-ROK™ 4 5/8-11 MTD 100 GRIT	415.08
C4750003	SLABMASTER™ 10" GRIT #3 LARGE PINS	459.00
C4750004	SLABMASTER™ 10" GRIT #4 LARGE PINS	459.00
C475001	STRAIGHT-EDGE™ 4" GRIT #1 SNAILOCK	163.56
C475002	STRAIGHT-EDGE™ 4" GRIT #2 SNAILOCK	163.56
C4750103	SLABMASTER™ 10" GRIT #3 SLIDE PINS	459.00
C4750104	SLABMASTER™ 10" GRIT #4 SLIDE PINS	459.00

For most recent pricing, go to www.abrasive-tech.com • Prices and product specifications are subject to change without notice.

Part #	DESCRIPTION	2022 \$Price
C4750203	SLABMASTER™ 8" GRIT #3 SLIDE PINS	319.14
C4750204	SLABMASTER™ 8" GRIT #4 SLIDE PINS	319.14
C4750205	SLABMASTER™ 8" GRIT #5 SLIDE PINS	319.14
C4750206	SLABMASTER™ 8" GRIT #6 SLIDE PINS	319.14
C634001	CUPWHEEL MB 4" 50 GRIT SNAILOCK	263.15
C634002	CUPWHEEL MB 4" 150 GRIT SNAILOCK	231.53
C634003	CUPWHEEL MB 4" 100 GRIT SNAILOCK	248.13
C634004	CUPWHEEL MB 4" 30 GRIT SNAILOCK	286.63
C6750001	SLABMASTER™ 10" GRIT #1 LARGE PINS	614.45
C6750002	SLABMASTER™ 10" GRIT #2 LARGE PINS	614.45
C6750101	SLABMASTER™ 10" GRIT #1 SLIDE PINS	614.45
C6750102	SLABMASTER™ 10" GRIT #2 SLIDE PINS	614.45
C6750201	SLABMASTER™ 8" GRIT #1 SLIDE PINS	385.70
C6750202	SLABMASTER™ 8" GRIT #2 SLIDE PINS	385.70
C910B3301	BELT 4" X 106" D3 70 GRIT	1342.93
C910B3302	BELT 4" X 106" D3 120 GRIT	1160.91
C910B3303	BELT 4" X 106" D3 220 GRIT	977.85
C910B4811S	BELT 3" X 24" D3 70 GRIT (2 PADS)	249.16
C910B4813E	BELT 3 X 24 D3 220 GRIT - 5 PACK	842.55
C910B4911	BELT 3 X 21 D3 70 GRIT	222.05
C910B4911S	BELT 3" X 21" D3 70 GRIT (2 PADS)	222.05
C910B4912S	BELT 3" X 21" D3 120 GRIT (2 PADS)	194.90
C910B4913S	BELT 3" X 21" D3 220 GRIT (2 PADS)	167.90
C910G4911S	BELT 3 X 21 D3 70 GRIT	215.57
C910G4912S	BELT 3 X 21 D3 70 GRIT	215.57
C910G4913S	BELT 3 X 21 D3 70 GRIT	215.57
C9110001	SUPER-EDGE™ PLUS 5" 50 GRIT SNAILOCK	137.01
C9110002	SUPER-EDGE™ PLUS 5" 120 GRIT SNAILOCK	137.01
C9110003	SUPER-EDGE™ PLUS 5" 220 GRIT SNAILOCK	137.01
C9110004	SUPER-EDGE™ PLUS 5" 400 GRIT SNAILOCK	137.01
C9110005	SUPER-EDGE™ PLUS 5" 600 GRIT SNAILOCK	137.01
C9110006	SUPER-EDGE™ PLUS 5" 800 GRIT SNAILOCK	137.01
C9110007	SUPER-EDGE™ PLUS 5" 1800 GRIT SNAILOCK	137.01
C9110008	SUPER-EDGE™ PLUS 5" 3500 GRIT SNAILOCK	137.01
C9110011	SUPER-EDGE™ PLUS 6" 50 GRIT SNAILOCK	175.53
C9110012	SUPER-EDGE™ PLUS 6" 120 GRIT SNAILOCK	175.53
C9110013	SUPER-EDGE™ PLUS 6" 220 GRIT SNAILOCK	175.53
C9110014	SUPER-EDGE™ PLUS 6" 400 GRIT SNAILOCK	175.53
C9110015	SUPER-EDGE™ PLUS 6" 600 GRIT SNAILOCK	175.53
C9110016	SUPER-EDGE™ PLUS 6" 800 GRIT SNAILOCK	175.53
C9110017	SUPER-EDGE™ PLUS 6" 1800 GRIT SNAILOCK	175.53
C9110018	SUPER-EDGE™ PLUS 6" 3500 GRIT SNAILOCK	175.53
C9110020	GENESIS™ 3" X NH 220 D3	19.60
C911D3010	FLOORSHINE™ 3" 50 GRIT LOOP	19.15
C911D30103	FLOORSHINE™ 3" 30 GRIT LOOP	19.72
C911D3012	FLOORSHINE™ 3" 120 GRIT LOOP	19.15

Part #	DESCRIPTION	2022 \$Price
C911D3013	FLOORSHINE™ 3" 220 GRIT LOOP	16.52
C911D3014	FLOORSHINE™ 3" 400 GRIT LOOP	16.18
C911D3016	FLOORSHINE™ 3" 800 GRIT LOOP	16.18
C911D3017	FLOORSHINE™ 3" 1800 GRIT LOOP	16.52
C911D3300	SHINE-X™ 3" 50 GRIT LOOP	37.96
C911D3302	SHINE-X™ 3" 120 GRIT LOOP	37.96
C911D3303	SHINE-X™ 3" 220 GRIT LOOP	37.96
C911D3304	SHINE-X™ 3" 400 GRIT LOOP	37.96
C911D3306	SHINE-X™ 3" 800 GRIT LOOP	37.96
C911D3307	SHINE-X™ 3" 1800 GRIT LOOP	37.96
C911D3308	SHINE-X™ 3" 3500 GRIT LOOP	37.96
C911D3800	FLOORMASTER™ 3" GRIT #2 LOOP	42.06
C911D38003	FLOORMASTER™ 3" GRIT #1 LOOP	41.84
C911D3802	FLOORMASTER™ 3" GRIT #3 LOOP	42.06
C911D3803	FLOORMASTER™ 3" GRIT #4 LOOP	42.06
C911D3804	FLOORMASTER™ 3" GRIT #5 LOOP	42.06
C911D3806	FLOORMASTER™ 3" GRIT #6 LOOP	42.06
C911D3807	FLOORMASTER™ 3" GRIT #7 LOOP	42.06
C911D4123	SUPER-EDGE™ 4" 220 GRIT LOOP	63.61
C911D4124	SUPER-EDGE™ 4" 400 GRIT LOOP	63.61
C911D4126	SUPER-EDGE™ 4" 800 GRIT LOOP	63.61
C911D4127	SUPER-EDGE™ 4" 1800 GRIT LOOP	63.61
C911D4128	SUPER-EDGE™ 4" 3500 GRIT LOOP	63.61
C911D4153	SUPER-EDGE™ 4" 5 STEP GRIT #3 LOOP	63.61
C911D4154	SUPER-EDGE™ 4" 5 STEP GRIT #4 LOOP	63.61
C911D4155	SUPER-EDGE™ 4" 5 STEP GRIT #5 LOOP	63.61
C911D4220	SUPER-EDGE™ 4" 50 GRIT SNAILOCK	71.24
C911D4222	SUPER-EDGE™ 4" 120 GRIT SNAILOCK	71.24
C911D4223	SUPER-EDGE™ 4" 220 GRIT SNAILOCK	71.24
C911D4224	SUPER-EDGE™ 4" 400 GRIT SNAILOCK	71.24
C911D4226	SUPER-EDGE™ 4" 800 GRIT SNAILOCK	71.24
C911D4227	SUPER-EDGE™ 4" 1800 GRIT SNAILOCK	71.24
C911D4228	SUPER-EDGE™ 4" 3500 GRIT SNAILOCK	71.24
C911D4300	SHINE-X™ 4" 50 GRIT LOOP	55.51
C911D4302	SHINE-X™ 4" 120 GRIT LOOP	55.51
C911D4303	SHINE-X™ 4" 220 GRIT LOOP	55.51
C911D4304	SHINE-X™ 4" 400 GRIT LOOP	55.51
C911D4306	SHINE-X™ 4" 800 GRIT LOOP	55.51
C911D4307	SHINE-X™ 4" 1800 GRIT LOOP	55.51
C911D4308	SHINE-X™ 4" 3500 GRIT LOOP	55.51
C911D4500	SUPER-DIASHINE™ 4" 50 GRIT LOOP	43.31
C911D4502	SUPER-DIASHINE™ 4" 120 GRIT LOOP	43.31
C911D4503	SUPER-DIASHINE™ 4" 220 GRIT LOOP	43.31
C911D4506	SUPER-DIASHINE™ 4" 800 GRIT LOOP	43.31
C911D450D	SUPER-DIASHINE™ 4" 7 GRIT SET LOOP	309.47
C911D5200	SUPER-EDGE™ 5" 50 GRIT SNAILOCK	137.01

Order ONLINE at www.abrasive-tech.com or Call USA: 1.800.964.8324 • Outside USA: 1.740.548.4100 • Fax: 1.740.548.7617

For most recent pricing, go to www.abrasive-tech.com • Prices and product specifications are subject to change without notice.

Part #	DESCRIPTION	2022 \$Price
C911D5202	SUPER-EDGE™ 5" 120 GRIT SNAILOCK	137.01
C911D5203	SUPER-EDGE™ 5" 220 GRIT SNAILOCK	137.01
C911D5204	SUPER-EDGE™ 5" 400 GRIT SNAILOCK	137.01
C911D5205	SUPER-EDGE™ 5" 600 GRIT SNAILOCK	137.01
C911D5206	SUPER-EDGE™ 5" 800 GRIT SNAILOCK	137.01
C911D5207	SUPER-EDGE™ 5" 1800 GRIT SNAILOCK	137.01
C911D5208	SUPER-EDGE™ 5" 3500 GRIT SNAILOCK	137.01
C911D5300	SHINE-X™ 5" 50 GRIT LOOP	77.51
C911D5302	SHINE-X™ 5" 120 GRIT LOOP	77.51
C911D5303	SHINE-X™ 5" 220 GRIT LOOP	77.51
C911D5304	SHINE-X™ 5" 400 GRIT LOOP	77.51
C911D5306	SHINE-X™ 5" 800 GRIT LOOP	77.51
C911D6200	SUPER-EDGE™ 6" 50 GRIT SNAILOCK	175.53
C911D6202	SUPER-EDGE™ 6" 120 GRIT SNAILOCK	175.53
C911D6203	SUPER-EDGE™ 6" 220 GRIT SNAILOCK	175.53
C911D6204	SUPER-EDGE™ 6" 400 GRIT SNAILOCK	175.53
C911D6205	SUPER-EDGE™ 6" 600 GRIT SNAILOCK	175.53
C911D6206	SUPER-EDGE™ 6" 800 GRIT SNAILOCK	175.53
C911D6207	SUPER-EDGE™ 6" 1800 GRIT SNAILOCK	175.53
C911D6208	SUPER-EDGE™ 6" 3500 GRIT SNAILOCK	175.53
C911G1001	GENESIS 10 X 1 G-70 FVEL BACK	241.30
C911G1002	GENESIS 10 X 1 G-120 FVEL BACK	211.78
C911G1003	GENESIS 10 X 1 G-220 FVEL BACK	183.40
C911G1004	GENESIS 10 X 1 G-400 FVEL BACK	177.01
C911G3100	GENESIS 3 X NH 50 GRIT FVEL	40.79
C911G3101	GENESIS™ 3" X NH 70 GRIT LOOP	27.14
C911G3102	GENESIS™ 3" X NH 120 GRIT LOOP	23.47
C911G3103	GENESIS™ 3" X NH 220 GRIT LOOP	19.60
C911G3104	GENESIS™ 3" X NH 400 GRIT LOOP	17.89
C911G3105N	GENESIS™ 3" X NH 600N GRIT LOOP	17.55
C911G3105R	GENESIS™ 3" X NH 600R GRIT LOOP	16.18
C911G3106	GENESIS™ 3" X NH 800 GRIT LOOP	16.18
C911G3107	GENESIS™ 3" X NH 1800 GRIT LOOP	16.18
C911G3108	GENESIS™ 3" X NH 3500 GRIT LOOP	16.18
C911G4101	GENESIS™ 4" X NH 70 GRIT LOOP	48.78
C911G4102	GENESIS™ 4" X NH 120 GRIT LOOP	42.06
C911G4103	GENESIS™ 4" X NH 220 GRIT LOOP	33.96
C911G4104	GENESIS™ 4" X NH 400 GRIT LOOP	31.13
C911G4105N	GENESIS™ 4" X NH 600N GRIT LOOP	29.80
C911G4105R	GENESIS™ 4" X NH 600 GRIT LOOP	27.02
C911G4106	GENESIS™ 4" X NH 800 GRIT LOOP	27.02
C911G4107	GEN.4" X NH 1800 GRIT LOOP	27.02
C911G4108	GEN.4" X NH 3500 GRIT LOOP	27.02
C911G4201	GENESIS™ 4" X 5/8" 70 GRIT LOOP	48.78
C911G4202	GENESIS™ 4" X 5/8" 120 GRIT LOOP	42.06
C911G4203	GENESIS™ 4" X 5/8" 220 GRIT LOOP	33.96

Part #	DESCRIPTION	2022 \$Price
C911G4204	GENESIS™ 4" X 5/8" 400 GRIT LOOP	31.13
C911G4205N	GENESIS™ 4" X 5/8" 600N GRIT LOOP	33.05
C911G4205R	GENESIS™ 4" X 5/8" 600R GRIT LOOP	27.70
C911G4206	GENESIS™ 4" X 5/8" 800 GRIT LOOP	27.70
C911G4207	GENESIS™ 4" X 5/8" 1800 GRIT LOOP	27.70
C911G4208	GENESIS™ 4" X 5/8" 3500 GRIT LOOP	27.70
C911G420R	GENESIS™ 4" X 5/8" 8 GRIT SET LOOP	251.55
C911G5101	GENESIS™ 5" X NH 70 GRIT LOOP	76.36
C911G5102	GENESIS™ 5" X NH 120 GRIT LOOP	64.86
C911G5103	GENESIS™ 5" X NH 220 GRIT LOOP	54.14
C911G5104	GENESIS™ 5" X NH 400 GRIT LOOP	48.78
C911G5105R	GENESIS™ 5" X NH 600R GRIT LOOP	45.94
C911G5106	GENESIS™ 5" X NH 800 GRIT LOOP	44.67
C911G5107	GENESIS™ 5" X NH 1800 GRIT LOOP	44.67
C911G5108	GENESIS™ 5" X NH 3500 GRIT LOOP	44.67
C911G5201	GENESIS™ 5" X 5/8" 70 GRIT LOOP	76.36
C911G5202	GENESIS™ 5" X 5/8" 120 GRIT LOOP	64.86
C911G5203	GENESIS™ 5" X 5/8" 220 GRIT LOOP	54.14
C911G5204	GENESIS™ 5" X 5/8" 400 GRIT LOOP	48.78
C911G5205N	GENESIS™ 5" X 5/8" 600N GRIT LOOP	48.78
C911G5205R	GENESIS™ 5" X 5/8" 600R GRIT LOOP	44.67
C911G5206	GENESIS™ 5" X 5/8" 800 GRIT LOOP	44.67
C911G5207	GENESIS™ 5" X 5/8" 1800 GRIT LOOP	44.67
C911G5208	GENESIS™ 5" X 5/8" 3500 GRIT LOOP	44.67
C911G520R	GENESIS™ 5" X 5/8" 8 GRIT SET LOOP	392.31
C911G7200	GENESIS 7 X 7/8 50 GRIT FVEL BACK	173.14
C911G7201	GENESIS™ 7" X 7/8" 70 GRIT LOOP	134.27
C911G7202	GENESIS™ 7" X 7/8" 120 GRIT LOOP	116.37
C911G7203	GENESIS™ 7" X 7/8" 220 GRIT LOOP	96.99
C911G7204	GENESIS™ 7" X 7/8" 400 GRIT LOOP	78.88
C911G7205N	GENESIS™ 7" X 7/8" 600N GRIT LOOP	77.51
C911G7205R	GENESIS™ 7" X 7/8" 600R GRIT LOOP	69.88
C911G7206	GENESIS™ 7" X 7/8" 800 GRIT LOOP	69.88
C911G7207	GENESIS™ 7" X 7/8" 1800 GRIT LOOP	69.88
C911G7208	GENESIS™ 7" X 7/8" 3500 GRIT LOOP	69.88
C911G8103	GENESIS 8 X NH 220 GRIT FVEL BACK	113.92
C911G8301	GENESIS 8 X NH 70 GRIT PSA BACK	152.50
C911G8302	GENESIS 8 X NH 120 GRIT PSA BACK	131.87
C911G8303	GENESIS 8 X NH 220 GRIT PSA BACK PLATED	109.88
C911G8304	GENESIS 8 X NH 400 GRIT PSA BACK	96.99
C911G8305N	GENESIS 8 X NH 600N GRIT PSA	93.12
C911R1040	TECH-LOK™ 1" 50 GRIT	19.38
C911R10403	TECH-LOK™ 1" 30 GRIT	21.44
C911R1041	TECH-LOK™ 1" 70 GRIT	16.52
C911R1042	TECH-LOK™ 1" 120 GRIT	13.79
C911R1043	TECH-LOK™ 1" 220 GRIT	11.85

Order ONLINE at www.abrasive-tech.com or Call USA: 1.800.964.8324 • Outside USA: 1.740.548.4100 • Fax: 1.740.548.7617

For most recent pricing, go to www.abrasive-tech.com • Prices and product specifications are subject to change without notice.

Part #	DESCRIPTION	2022 \$Price
C911R1045R	TECH-LOK 1" 600R GRIT	9.01
C911R2040	TECH-LOK™ 2" 50 GRIT	26.21
C911R20403	TECH-LOK™ 2" 30 GRIT	29.07
C911R2041	TECH-LOK™ 2" 70 GRIT	19.03
C911R2042	TECH-LOK™ 2" 120 GRIT	16.76
C911R2043	TECH-LOK™ 2" 220 GRIT	14.47
C911R2044	TECH-LOK™ 2" 400 GRIT	14.06
C911R3030	BABY-ROK™ 3" X 1-1/4" 50 GRIT LOOP	42.06
C911R30303	BABY-ROK™ 3" X 1-1/4" 30 GRIT LOOP	47.54
C911R3031	BABY-ROK™ 3" X 1-1/4" 70 GRIT LOOP	28.96
C911R3032	BABY-ROK™ 3" X 1-1/4" 120 GRIT LOOP	24.73
C911R3033	BABY-ROK™ 3" X 1-1/4" 220 GRIT LOOP	20.74
C911R3034	BABY-ROK™ 3" X 1-1/4" 400 GRIT LOOP	19.95
C911R3040	TECH-LOK™ 3" 50 GRIT	40.79
C911R30403	TECH-LOK™ 3" 30 GRIT	52.79
C911R3041	TECH-LOK™ 3" 70 GRIT	34.20
C911R3042	TECH-LOK™ 3" 120 GRIT	29.85
C911R3043	TECH-LOK™ 3" 220 GRIT	25.64
C911R4030	BABY-ROK™ 4" X 1-3/4" 50 GRIT LOOP	73.74
C911R40303	BABY-ROK™ 4" X 1-3/4" 30 GRIT LOOP	81.60
C911R4031	BABY-ROK™ 4" X 1-3/4" 70 GRIT LOOP	50.16
C911R4032	BABY-ROK™ 4" X 1-3/4" 120 GRIT LOOP	43.31
C911R4033	BABY-ROK™ 4" X 1-3/4" 220 GRIT LOOP	36.70
C911R4034	BABY-ROK™ 4" X 1-3/4" 400 GRIT LOOP	33.75
C911R5030	BABY-ROK™ 5" X 2-3/4" 50 GRIT LOOP	94.75
C911R50303	BABY-ROK™ 5" X 2-3/4" 30 GRIT LOOP	121.47
C911R5031	BABY-ROK™ 5" X 2-3/4" 70 GRIT LOOP	79.45
C911R5032	BABY-ROK™ 5" X 2-3/4" 120 GRIT LOOP	68.17
C911R5033	BABY-ROK™ 5" X 2-3/4" 220 GRIT LOOP	60.04
C911R70303	BABY-ROK™ 7" X 4-1/4" 30 GRIT LOOP	219.53
C911T3011	TURBO-ROK™ 3" 70 GRIT LOOP	43.31
C912G2004	STRIP (RGH) 2-1/4 X 4, 400 GRIT FVEL	15.17
C912H3014	DIAMOND STRIPS 400 GRIT LOOP	15.50
C912H3015N	DIAMOND STRIPS 600N GRIT LOOP	16.42
C912H3015R	DIAMOND STRIPS 600 GRIT LOOP	13.45
C912H3016	DIAMOND STRIPS 800 GRIT LOOP	13.45
C912H3017	DIAMOND STRIPS 1800 GRIT LOOP	13.45
C912H3018	DIAMOND STRIPS 3500 GRIT LOOP	13.45
C912H301R	DIAMOND STRIPS 8 GRITS W/HANDBLOCK™	138.14
C912H3111	DIAMOND STRIPS 70 GRIT LOOP	25.07
C912H3112	DIAMOND STRIPS 120 GRIT LOOP	21.66
C912H3113	DIAMOND STRIPS 220 GRIT LOOP	18.35
C913H1011	HAND PAD 2-1/4" X 4" 70 GRIT	23.93
C913H1012	HAND PAD 2-1/4" X 4" 120 GRIT	20.52
C913H1013	HAND PAD 2-1/4" X 4" 220 GRIT	17.33
C913H1014	HAND PAD 2-1/4" X 4" 400 GRIT	14.82

Part #	DESCRIPTION	2022\$Price
C913H1015N	HAND PAD 2-1/4" X 4" 600N GRIT	15.27
C913H1015R	HAND PAD 2-1/4" X 4" 600R GRIT	12.89
C913H1016	HAND PAD 2-1/4" X 4" 800 GRIT	12.89
C913H1017	HAND PAD 2-1/4" X 4" 1800 GRIT	12.89
C913H1018	HAND PAD 2-1/4" X 4" 3500 GRIT	12.89
C913H101R	HAND PAD 2-1/4" X 4" 8 GRIT SET	120.25
C913H1040	HAND PAD ROK™ 2-1/4" X 4" 50 GRIT	35.33
C913H1041	HAND PAD ROK™ 2-1/4" X 4" 70 GRIT	28.27
C913H1042	HAND PAD ROK™ 2-1/4" X 4" 120 GRIT	24.50
C913H1043	HAND PAD ROK™ 2-1/4" X 4" 220 GRIT	20.06
C9140001	GENESIS™ 12" X 12" 400 GRIT PSA	295.83
C914S1001	GENESIS™ 12" X 12" 70 GRIT NO BACK	326.56
C914S1002	GENESIS™ 12" X 12" 120 GRIT NO BACK	287.81
C914S1003	GENESIS™ 12" X 12" 220 GRIT NO BACK	242.78
C914S1004	GENESIS™ 12" X 12" 400 GRIT NO BACK	228.54
C914S1005	GENESIS™ 12" X 12" 600R GRIT NO BACK	250.47
C914S1005N	GENESIS™ 12" X 12" 600N GRIT NO BACK	211.78
C914S1006	GENESIS™ 12" X 12" 800 GRIT NO BACK	250.47
C914S2001	GENESIS™ 12" X 12" 70 GRIT LOOP	362.81
C914S2002	GENESIS™ 12" X 12" 120 GRIT LOOP	313.68
C914S2003	GENESIS™ 12" X 12" 220 GRIT LOOP	264.67
C914S2004	GENESIS™ 12" X 12" 400 GRIT LOOP	252.93
C914S2005	GENESIS™ 12" X 12" 600R GRIT LOOP	267.72
C914S2006	GENESIS™ 12" X 12" 800 GRIT LOOP	219.53
C914S3003	GENESIS™ 12" X 12" 220 GRIT PSA	295.83
C9150001	TECH PLATE 13" 4 HOLDER WTH PIN BRACKET	285.37
C915P0010	BACKPLATE TECH-LOK™ 1"	22.58
C915P0020	BACKPLATE TECH-LOK™ 2"	22.58
C915P0030	BACKPLATE TECH-LOK™ 3"	22.58
C915P0301	BACKPLATE 3" FLEXFOAM™ HOOK	30.66
C915P0310	BACKPLATE 3" MANDREL HOOK	30.66
C915P0401	BACKPLATE 4" FLEXFOAM™ HOOK	31.92
C915P0410	BACKPLATE 4" MANDREL HOOK	31.92
C915P0441	BACKPLATE 4" SNAILOCK HOOK	24.50
C915P0443	BACKPLATE 4" SNAILOCK [THICK] HOOK	28.61
C915P0490	BACKPLATE SNAILOCK HOLDER 4" ALUMINUM	75.00
C915P0501	BACKPLATE 5" FLEXFOAM™ HOOK	35.33
C915P0541	BACKPLATE 5" SNAILOCK HOOK	36.70
C915P0590	BACKPLATE SNAILOCK HOLDER 5" ALUMINUM	98.25
C915P0701	BACKPLATE 7" FLEXFOAM™ HOOK	39.33
C915P1000	FRN SHOE W/MALE VEL	23.25
C915P1030	FRN MOUNTING BRACKET	19.83
C915P1701	TECH PLATE 17" HOOK BOTH SIDES	105.85
C915P2001	TECH PLATE 20" W/ 6 HOOK PAD	140.09
C915P2222	SUPER-ROK™ 7/8" ADAPTOR 5/8"-11 THREAD	35.33
C915P3310	BACKPLATE FLEXFOAM™ INSERT 3" HOOK	13.79

Order ONLINE at www.abrasive-tech.com or Call USA: 1.800.964.8324 • Outside USA: 1.740.548.4100 • Fax: 1.740.548.7617

For most recent pricing, go to www.abrasive-tech.com • Prices and product specifications are subject to change without notice.

Part #	DESCRIPTION	2022 \$Price
C915P3440	BACKPLATE FLEXFOAM 3" W/HOOK & LOOP	13.79
C915P4440	BACKPLATE FLEXFOAM INSERT 4" HOOK/LOOP	17.89
C915P600	SNAILOCK ADAPTOR FOR 6" MB S6750090	83.31
C915SS17	BUFFING DISC 17" STAINLESS STEEL	28.51
C915TH3099	HANDBLOCK™ HOOK	15.27
C915V1210	LOOP 12" SQUARE NO BACK	21.66
C915V1220	HOOK 12" SQUARE NO BACK	21.66
C915V1223	HOOK 12" SQUARE PSA BACK	43.31
C915V3130	LOOP 3" DIAMETER PSA BACK	3.20
C915V3230	HOOK 3" DIAMETER PSA BACK	3.20
C915V4230	HOOK 4" DIAMETER PSA BACK	5.14
C915X0615	GRAPHITE PAD 4" X 7"	6.84
C918G0002	GENESIS POOL DISC 7" X 7/8" 120G SILVER	116.37
C9201207	SLABMASTER™ 8" GRIT #7 BUFF SLIDE PINS	254.40
C920GD03	DIA-GLO™ DARK GRANITE 1 LITRE	41.40
C920GD055	DIA-GLO 55 LB FOR DARK GRANITE	920.04
C920GD24	DIA-GLO™ DARK GRANITE 10 LITRE	339.27
C920GL03	DIA-GLO™ LIGHT GRANITE 1 LITRE	41.40
C920GL055	DIA-GLO 55 LB FOR LIGHT GRANITE	920.04
C920GL24	DIA-GLO™ LIGHT GRANITE 10 LITRE	339.27
C920M003	DIA-GLO™ MARBLE 1 LITRE	46.00
C920M024	DIA-GLO™ MARBLE 10 LITRE	362.27
C920M055	DIA-GLO M 55 LB FOR MARBLE	1000.55
C920SKIT	DIA-GLO S™ 500 SQUARE FOOT KIT	218.52
C920SL01	DIA-GLO S™ LIQUID 5 QT	218.52
C920SL02	DIA-GLO S™ LIQUID 1 QT SPRAY BOTTLE	60.96
C920SP01	DIA-GLO S™ POWDER 5 QT	218.52
C920SP02	DIA-GLO S™ POWDER 1 PT	60.96
C938F3	BUFFING DISC FELT 3" X 1/2" LOOP	13.79
C938F4	BUFFING DISC FELT 4" X 1/2" LOOP	17.89
C938F5	BUFFING DISC FELT 5" X 1/2" LOOP	23.37
C9750002	SLABMASTER 10" GRIT M0 DARK GREEN	178.28
C9750004	SLABMASTER 10" GRIT M2 YELLOW	178.28
C9750006	SLABMASTER 10" GRIT M4 GRIT PEACH	178.28
C9750011	SLABMASTER 14" GRIT M0 DARK GREEN	247.91
C9750013	SLABMASTER 14" GRIT M2 YELLOW	247.91
C975003	STRAIGHT-EDGE™ 4" GRIT #3 SNAILOCK	134.27
C975004	STRAIGHT-EDGE™ 4" GRIT #4 SNAILOCK	134.27
C975005	STRAIGHT-EDGE™ 4" GRIT #5 SNAILOCK	63.61
C9751004	SLABMASTER™ 10" GRIT #5 LARGE PINS	246.55
C9751005	SLABMASTER™ 10" GRIT #6 LARGE PINS	246.55
C9751006	SLABMASTER™ 10" GRIT #7 GRA BUFF LG PINS	139.53
C9751008	SLABMASTER™ 10" GRIT #8 MAR BUFF LG PINS	130.51
C9751104	SLABMASTER™ 10" GRIT #5 SLIDE PINS	246.55
C9751105	SLABMASTER™ 10" GRIT #6 SLIDE PINS	246.55
C9751106	SLABMASTER™ 10" GRIT #7 BUFF SLIDE PINS	139.53

Part #	DESCRIPTION	2022\$Price
C9751108	SLABMASTER™ 10" GRIT #8 FELT SLIDE PINS	130.51
C9751200	SLABMASTER™ 8" FULL SET SLIDE PINS	1763.39
S2401840859N	1A1 6 X .75 X 1.25 D220N EP	444.55
S3463005N	FRM WHL 5 X 1.5 X 1.375 D120N PBS	663.98
S3463005R	FRM WHL 5 X 1.5 X 1.375 D120N PBS	386.02
S3750163N	1F1 4 X .125 X .875 D40N PBS	143.97
S3750174N	FRM WHL 5 X 1.5 X 1.375 D120N PBS	663.98
S3750174R	FRM 5 X 1.5 X 1.375 D120R PBS	360.36
S3750174S	FRM 5 X 1.5 X 1.375 D120S PBS	530.92
S3750179N	P.B.S.® RTR 20MM X 56MM X 1/2 GAS D80N	199.35
S3750180N	P.B.S.® RTR 20MM X 56MM X 1/2GAS D200N	199.35
S3750245N	12A2M 4.5 X 1 X 5/8-11 D40N PBS	321.30
S3750245R	12A2M 4.5 X 1 X 5/8-11 D40R PBS	119.25
S3750288N	MTD FRM .65 X 1.25 X .25 X 3.3 D50N PBS	123.36
S3750289N	BALL RTR .25 X 1.5 X .25 X3.5 D50N PBS	82.22
S3750290N	MTD FRM .65 X 2.75 X .25 X 4.8 D50N PBS	123.36
S3750358N	9F6 150MM X 42MM X TAPER D40N PBS	897.49
S3750360R	9F6 150MM X 42MM X TAPER D120R PBS	538.22
S3750380P	RTR .25 X .400 X .375 D60P PBS	50.53
S3750381P	C-DRILL 8MM X .085 X .375 D80P PBS	48.38
S3750396N	9F6 150MM X 42MM X TAPER D80N PBS	897.49
S3750397N	9F6 150MM X 42MM X TAPER D120N PBS	897.49
S3750398N	9F6 150MM X 42MM X TAPER D220N PBS	897.49
S3750404N	MTD FRM 63.3MM X 60 X 24 X 75 D200N PBS	850.57
S3750405N	MTD FRM 74.5MM X 58.5 X 19 X74 D220N PBS	940.68
S3750406N	9F6 150MM X 42MM X TAPER D240N PBS	897.49
S3750407N	6A1 6.5 X 4.063 X 50MM D40N PBS	1419.25
S3750408N	6A1 6.5 X 6.063 X 50MM D40N PBS	1590.68
S3750409N	1A1 5.5 X 14 X 50MM D40N PBS	2081.38
S3750412R	9F6 150MM X 42MM X TAPER D240R PBS	538.22
S3750413S	FRM WHL 5 X 1.5 X 1.375 D120S PBS	570.84
S475001	SUPER-EDGE™ 6" FINE HYBRID SNAILOCK	325.65
S4750030N	*SLABMASTER SEGMENT #3 1-1/2X3/8X1/2	38.93
S4750040N	*SLABMASTER SEGMENT #4 1-1/2X3/8X1/2	46.08
S4750304	SUPER-EDGE™ 6" COARSE HYBRID SNAILOCK	351.23
S6750096	PARK VELOCITY 6" SMART SPINDLE #50	834.34
S9060003	CONTINUUM DIAMOND SUEDING STRIP G150	1348.08
S9060004	DOUBLE TRAPEZE D90 SILVER G400	968.39
S9060005	DOUBLE TRAPEZE D90 SILVER G600	968.39
S9060006	DOUBLE TRAPEZE D90 SILVER G800	968.39
S9060014	DOUBLE TRAPEZE D90 SILVER G600S	968.39
S9061055	CONTINUUM DIAMOND SUEDING STRIP G220	1243.38
S9061057	CONTINUUM DIAMOND SUEDING STRIP G400	1243.38
S9061058	LAFER SUEDING STRIP FLEX SILVER 220G	1381.78
S9061086	3" X 6" TEXTILE SUEDING STRIP GRIT 220	11.42
S9061092	LAFER SUEDING STRIP KEVLAR 220G	1334.00

Order ONLINE at www.abrasive-tech.com or Call USA: 1.800.964.8324 • Outside USA: 1.740.548.4100 • Fax: 1.740.548.7617

For most recent pricing, go to www.abrasive-tech.com • Prices and product specifications are subject to change without notice.

Part #	DESCRIPTION	2022 \$Price
S9061093	LAFER SUEDING STRIP KEVLAR 400G	1334.00
S9061095	LAFER SUEDING STRIP KEVLAR 8800MM 220G	1982.00
S9061096	LAFER CONTINUUM KEVLAR 8800MM 400G	2021.53
S9061097	CONTINUUM STRIP G0400 3" x 595" JOINTED	3140.85
S9061098	CONTINUUM SUEDING STRIP SILVER 220G	1341.54
S9061099	LAFER SUEDING STRIP KEVLAR 150G LARGE P.	1587.00
S9061102	LAFER SUEDING STRIP KEVLAR 120G LARGE P.	1587.00
S9061103	LAFER SUEDING STRIP KEVLAR 600G	1354.89
S9061104	CONTINUUM SUEDING STRIP 220G 499"	2616.50
S9061105	CONTINUUM SUEDING STRIP 220G 364"	1813.23
S9061106	CONTINUUM SUEDING STRIP 150G 364"	1813.23
S9061107	CONTINUUM SUEDING STRIP 400G 364"	1813.23
S9061108	LAFER CONTINUUM KEVLAR 8800MM 600G	1982.00
S9061109	LAFER CONTINUUM KEVLAR 8800MM 800G	2021.53
S90690204	DOUBLE TRAPEZE D7 G400 SILVER	968.39
S90690205	DOUBLE TRAPEZE D7 G600 SILVER	968.39
S90690208	DOUBLE TRAPEZE D7 SILVER G600S	968.39
S90690209	DOUBLE TRAPEZE TORO SILVER G600	949.40
S90690210	DOUBLE TRAPEZE TORO SILVER D7 G600	921.74
S906919	D5S, GRIT G600 SANTEX	968.39
S9100004	BELT 3 X 24-15/16 D3 70 GRIT	253.38
S9100013	BELT 2 X 9.42 D3 120 GRIT	87.88
S9100014	BELT 2 X 18.84 D3 120 GRIT	135.62
S9100015	BELT 1 X 12 D3 GRIT 120	67.26
S9100016	BELT 3 X 10-11/16 D3 120 GRIT	122.78
S910B0202	BELT 3/4 X 20-1/2 D3 120 GRIT	86.01
S910B0221	BELT 1/2 X 13 D3 GRIT 70	65.57
S910B0322	BELT 3/8 X 13 D3 GRIT 120	65.76
S910B1121	BELT 1-1/2 X 12-5/8 D3 70 GRIT	81.35
S910B1122	BELT 1-1/2 X 12-5/8 D3 120 GRIT	73.31
S910B1123	BELT 1-1/2 X 12-5/8 D3 220 GRIT	66.50
S910B1124	BELT 1-1/2 X 12-5/8 D3 400 GRIT	64.14
S910B1125R	BELT 1-1/2 X 12-5/8 POLYREZ 600R GRIT	60.79
S910B1126	BELT 1½ X 12-5/8 POLYREZ 800 GRIT	61.02
S910B1127	BELT 1-1/2 X 12-5/8 POLYREZ 1800 GRIT	61.02
S910B1128	BELT 1-1/2 X 12-5/8 POLYREZ 3500 GRIT	61.02
S910B1191	BELT 1-1/2 X 18-3/4 D3 70 GRIT	111.82
S910B1192	BELT 1-1/2 X 18-3/4 D3 120 GRIT	99.72
S910B1193	BELT 1-1/2 X 18-3/4 D3 220 GRIT	88.82
S910B1194	BELT 1-1/2 X 18-3/4 D3 400 GRIT	85.14
S910B1195	BELT 1-1/2 X 18-3/4 POLYREZ 600R GRIT	79.09
S910B1196	BELT 1½ X 18-3/4 POLYREZ 800 GRIT	79.09
S910B1197	BELT 1½ X 18-3/4 POLYREZ 1800 GRIT	79.09
S910B1198	BELT 1½ X 18-3/4 POLYREZ 3500 GRIT	79.09
S910B1301	BELT 1 X 30 D3 70 GRIT	108.84
S910B1302	BELT 1 X 30 D3 120 GRIT	105.98

Part #	DESCRIPTION	2022\$Price
S910B1811	BELT 3/4 X 18 D3 70 GRIT	81.48
S910B2005N	BELT 4 X 106 D2 600N GRIT	857.39
S910B2302	BELT 2 X 30 D3 120 GRIT	181.63
S910B2373	BELT 2 X 36 D3 220 GRIT	180.74
S910B3191	BELT 3 X 25-3/32 D3, 70 GRIT	251.65
S910B3192	BELT 3 X 25-3/32 D3, 120 GRIT	220.09
S910B3193	BELT 3 X 25-3/32 D3, 220 GRIT	188.43
S910B3194	BELT 3 X 25-3/32 D3, 400 GRIT	181.19
S910B3195	BELT 3 X 25-3/32 RESIN, 600 GRIT	165.31
S910B3196	BELT 3 X 25-3/32 RESIN, 800 GRIT	159.68
S910B3197	BELT 3 X 25-3/32 RESIN, 1800 GRIT	171.47
S910B3198	BELT 3 X 25-3/32 RESIN, 3500 GRIT	171.47
S910B3304	BELT 4 X 106 D3 400 GRIT	910.49
S910B3901	BELT 3 X 90 D3 70 GRIT	844.40
S910B4483	BELT 4 X 48 D3 220 GRIT	433.23
S910B4602	BELT 4 X 60 D3 120 GRIT	645.10
S910B4804	BELT 4 X 24 D3 400 GRIT	220.60
S910B6483	BELT 6 X 48 D3 220 GRIT	651.02
S910B6484	BELT 6 X 48 D3 400 GRIT	643.54
S9110002	INDPRZ 14.96" x 5.98 W/4 HOLES 800 TOP	396.82
S9110003	INDPRZ 14.96" x 5.98 NO HOLES 800 BOTM	396.82
S9110011	GENESIS™ 12 X 50MM (1.96") G70 MAGNET	442.52
S9110012	GENESIS™ 12 X 50MM (1.96") G120 MAGNET	387.77
S9110013	INDS POLYREZ 6 x1/2"H 220 GRIT LOOP	75.40
S9110014	INDS POLYREZ 6 x1/2"H 400 GRIT LOOP	75.40
S9110015	INDS POLYREZ 6 x1/2"H 600 GRIT LOOP	75.40
S9110016	INDS POLYREZ 1" x NH G70 ROLOC	11.62
S9110017	INDS POLYREZ 2" x NH G70 ROLOC	13.73
S9110018	INDS POLYREZ 3" x NH G70 ROLOC	23.69
S9110019	MY-BULLNOSE™ 50 GRIT	65.09
S9110020	MY-BULLNOSE™ 120 GRIT	65.09
S9110021	MY-BULLNOSE™ 220 GRIT	65.09
S9110022	MY-BULLNOSE™ 400 GRIT	65.09
S9110023	MY-BULLNOSE™ 600 GRIT	65.09
S9110024	MY-BULLNOSE™ 800 GRIT	65.09
S9110025	MY-BULLNOSE™ 1200 GRIT	65.09
S911G0612	GENESIS 6 X NH 120 GRIT PSA	103.17
S911G0614	GENESIS 6 X NH 400 GRIT PSA	82.41
S911G1035N	GENESIS 10 X 1 GRIT 600N FVEL BACK	169.48
S911G1037	GENESIS 10 X 1 GRIT 1800 FVEL BACK	152.96
S911G1038	GENESIS 10 X 1 GRIT 3500 FVEL BACK	150.54
S911G1121	GENESIS 1-1/2 X NH 70 GRIT FVEL	25.40
S911G1122	GENESIS 1-1/2 X NH 120 GRIT FVEL	15.88
S911G1123	GENESIS 1-1/2 X NH 220 GRIT FVEL	13.76
S911G1124	GENESIS 1-1/2 X NH 400 GRIT FVEL	12.70
S911G1125N	GENESIS 1-1/2 X NH 600N GRIT FVEL	12.70

Order ONLINE at www.abrasive-tech.com or Call USA: 1.800.964.8324 • Outside USA: 1.740.548.4100 • Fax: 1.740.548.7617

For most recent pricing, go to www.abrasive-tech.com • Prices and product specifications are subject to change without notice.

Part #	DESCRIPTION	2022 \$Price
S911G1126	GENESIS 1-1/2 X NH 800 GRIT FVEL	12.70
S911G1127	GENESIS 1-1/2 X NH FVEL 1800 GRIT	12.70
S911G1211	*GENESIS 12 X NH 70 GRIT PSA	395.91
S911G1212	GENESIS 12 X NH 120 GRIT PSA	326.25
S911G1213	*GENESIS 12 X NH 220 GRIT PSA	268.21
S911G1214	*GENESIS 12 X NH 400 GRIT PSA	256.64
S911G1215N	GENESIS 12 X NH 600N GRIT PSA	256.64
S911G1513	GENESIS 15 X NH 220 GRIT PSA	483.87
S911G1514	GENESIS 15 X NH 400 GRIT PSA	452.67
S911G1611	GENESIS 16 X NH 70 GRIT PSA	655.77
S911G1612	*GENESIS 16 X NH 120 GRIT PSA	564.86
S911G1812	GENESIS 18 X NH 120 GRIT PSA	818.18
S911G1813	GENESIS 18 X NH 220 GRIT PSA	695.40
S911G1815N	GENESIS 18 X NH 600N GRIT PSA	664.71
S911G2025	*GENESIS 19-3/8 X NH 120 GRIT PSA	829.08
S911G2026	*GENESIS 19-3/8 X NH 400 GRIT PSA	666.77
S911G2027	GENESIS 19-3/8 X NH 70 GRIT PSA	975.02
S911G2028	*GENESIS 19-3/8 X NH 220 GRIT PSA	699.48
S911G2029	*GENESIS 19-3/8 X NH 600N GRIT PSA	679.36
S911G2482	GENESIS 24 X 5-5/8" 120 GRIT MAGNET BACK	1349.02
S911G5210	GENESIS 5 X 5/8 50 GRIT FVEL	95.96
S911G5401	GENESIS 5 X 7/8, 70 GRIT PSA	69.95
S911G6204	GENESIS 6 X 5/8 400 GRIT FVEL	79.47
S911G6206	GENESIS 6 X 5/8 POLYREZ 800 GRIT FVEL	68.73
S911G7601	D6 POOL DISC 7 X 7/8 70 GRIT FVEL BACK	117.93
S911G8306N	GENESIS 8 X NH 800N GRIT PSA BACK	133.25
S911T3012	3" TURBO-ROK 120 GRIT	40.47
S911T3013	3" TURBO-ROK 220 GRIT	36.32
S9120015	D3 STRIP 3 X 5.5, 70 GRIT PLAIN BACK	45.36
S9120016	D3 STRIP 3 X 5.5, 120 GRIT PLAIN BACK	38.21
S9120017	D3 STRIP 3 X 5.5, 220 GRIT PLAIN BACK	28.10
S9120018	5.25" X 6.25" FG 220G FVEL STRIP	68.52
S9120019	8" X 6.75" FG 220G FVEL STRIP	113.92
S9120020	D3 STRIP 3 X 5.5, 50 GRIT PLAIN BACK	45.36
S912B1205R	DURAGRIT MP STRIP 12 X 12, 600N GRIT PSA	365.93
S912H3924	STRIP M 2-3/4 X 5-1/4, 400 GRIT FVEL	19.22
S912H5642	5-1/4 X 6-1/4, 220 GRIT FVEL STRIP	70.57
S912H9110	D3 STRIP 9 X 11, 50 GRIT PLAIN BACK	280.26
S912H9111	D3 STRIP 9 X 11, 70 GRIT PLAIN BACK	236.12
S912H9112	D3 STRIP 9 X 11, 120 GRIT PLAIN BACK	213.92
S912H9113	D3 STRIP 9 X 11, 220 GRIT PLAIN BACK	173.62
S913H10403	ROK HAND PAD 2-1/4 X 4 GRIT 30	44.02
S9150003	MALE VEL DISC 6" X 7/8" PSA	7.87
S915P14	10" RB & B PLATE 3/4" PVC WITH VELCRO	88.94
S915V5120	MALE VEL DISC 5" X 7/8" PSA	5.47
S915V5230	HOOK 5" DIAMETER PSA BACK	8.06

Part #	DESCRIPTION	2022\$Price
S915X4115	TEFLON PADS 4" X 6" W/FOAM	26.09
S9160007	DIAMANCEL PAT WD GRIT 70 - 168 PCS	1432.35
S9160008	V2 DOUBLE TRAPEZE D2S SILVER G400	968.39
S9160009	V2 DOUBLE TRAPEZE D2S SILVER G600	968.39
S9160012	DIAMANCEL PAT AA GRIT 120 - 324 PCS	1547.27
S9160013	DIAMANCEL PAT AA GRIT 400 - 324 PCS	1232.13
S916103521	DIAMANCEL PAT A GRIT 120 - 200 PCS	1547.27
S9161035210	DIAMANCEL PAT A GRIT 220 - 200 PCS	1495.14
S9161035211	DIAMANCEL PAT D GRIT 70 - 160 PCS	1432.35
S9161035212	DIAMANCEL PAT A GRIT 110 - 200 PCS	1547.27
S9161035213	DIAMANCEL PAT AA GRIT 300 - 324 PCS	1307.96
S9161035216	DIAMANCEL PAT H GRIT 100 - 165 PCS	1393.27
S916103523	DIAMANCEL PAT A GRIT 300 - 200 PCS	1307.96
S916103524	DIAMANCEL PAT A GRIT 400 - 200 PCS	1232.13
S916103525	DIAMANCEL PAT B GRIT 120 - 160 PCS	1351.80
S916103527	DIAMANCEL PAT G GRIT 100 - 165 PCS	1259.63
S916103528	DIAMANCEL PAT H GRIT 70 - 165 PCS	1283.42
S916103532	DIAMANCEL PAT S GRIT 100 - 243 PCS	1702.48
S916103533	DIAMANCEL PAT M GRIT 100 - 455 PCS	1685.62
S916103534	DIAMANCEL PAT R GRIT 100 - 270 PCS	1685.62
S916103536	DIAMANCEL PAT E GRIT 100 - 160 PCS	1393.59
S916103537	DIAMANCEL PAT M GRIT 120 - 455 PCS	1532.38
S916103538	DIAMANCEL PAT M GRIT 300- 455 PCS	1295.00
S9169006005A	TRAPEZE SHEET D2 220 GRIT	509.67
S9169006006A	TRAPEZE SHEET D2 400 GRIT	484.19
S9169006007A	TRAPEZE SHEET D2 600 GRIT	454.06
S91690060160	SHEET D2 1,900MM (75") 220 GRIT	1551.41
S91690060161	SHEET D2 1,900MM (75") 400 GRIT	1473.90
S9169006045	SHEET FIBERGLASS COPPER 220 GRIT	976.06
S9169006048	DOUBLE TRAPEZE D2 GRIT 120	1223.25
S9169006049	DOUBLE TRAPEZE D2 GRIT 220	1019.33
S9169006050	DOUBLE TRAPEZE D2 GRIT 400	968.39
S9169006051	DOUBLE TRAPEZE D2 GRIT 600	968.39
S9169006054	SHEET DURAGRIT 2 GRIT 70	1608.11
S9169006055	SHEET DURAGRIT 2 GRIT 120	1257.00
S9169006064	SHEET HAND PAD D2 70 GRIT	1734.53
S9169006076	SHEET FIBERGLASS COPPER 120 GRIT	1152.26
S916S0031	SHEET BABY ROK 125MM 30 GRIT	2353.15
S916S0032	SHEET BABY ROK 125MM 50 GRIT	1997.05
S916S0033	SHEET BABY ROK 125MM 70 GRIT	1502.33
S916S0034	SHEET BABY ROK 125MM 120 GRIT	1186.32
S916S0053	SHEET DURAGRIT 3 W/O SIL CARB 30 GRIT	2627.60
S916S0057	SHEET DURAGRIT 3 W/O SIL CARB 220 GRIT	1306.67
S916S0071	SHEET FIBERGLASS 50 GRIT	1792.05
S916S0072	SHEET FIBERGLASS 70 GRIT	1502.33
S916S0073	SHEET FIBERGLASS 120 GRIT	1186.32

Order ONLINE at www.abrasive-tech.com or Call USA: 1.800.964.8324 • Outside USA: 1.740.548.4100 • Fax: 1.740.548.7617

For most recent pricing, go to www.abrasive-tech.com • Prices and product specifications are subject to change without notice.

Part #	DESCRIPTION	2022 \$Price
S916S0075	SHEET BABY ROK 100MM 50 GRIT	1997.05
S916S0076	SHEET BABY ROK 100MM 70 GRIT	1502.33
S916S0077	SHEET BABY ROK 100MM 120 GRIT	1152.26
S916S0085	SHEET BABY ROK 100MM 30 GRIT	2353.15
S916S0115	SHEET BABY ROK 75MM 50 GRIT	1948.36
S916S0116	SHEET BABY ROK 75MM 70 GRIT	1547.39
S916S0117	SHEET BABY ROK 75MM 120 GRIT	1152.26
S916S0224	SHEET HAND PADS ROK 30 GRIT	2353.15
S916S0227	SHEET HAND PADS ROK 120 GRIT	1186.32
S916S0228	SHEET HAND PADS ROK 220 GRIT	976.06
S9180010	ROK DISC 7"X7/8" G-50 FULL FACE MAG.BACK	216.02
S9180014	2" G0220 TECH-LOK SILVER	14.03
S9180015	TECHROK 3" G0220 SILVER	24.87
S9180016	TECHROK 3" G0070 SILVER	34.20
S9180017	TECHROK 2" G0070 SILVER	19.03
S9180018	TECHROK 1" G0070 SILVER	16.52
S9180019	TECHROK 3" G0050 SILVER	40.79
S9180020	POOLROK DISC 7 X 7/8 70 GRIT LOOP BACK	134.27
S9180021	POOLROK DISC 7 X 7/8 50 GRIT LOOP BACK	117.93
S9180022	POOLROK DISC 7 X 7/8 120 GRIT LOOP BACK	117.93
S9180023	POOLROK DISC 7 X 7/8 220 GRIT LOOP BACK	117.93
S9180024	GENESIS 5 X NH G0050 LOOP	104.59
S9184000	BABY ROK 4 X 5/8 FVEL 30 GRIT	93.84
S9184001	BABY ROK 4 X 5/8 FVEL 50 GRIT	84.80
S9185000	BABY ROK 5 X 5/8 FVEL 30 GRIT	139.70
S9185001	BABY ROK 5 X 5/8 FVEL 50 GRIT	108.98
S9187003	ROK 5 X NH FVEL 220 GRIT .010	45.51
S945002	50 PACK GENESIS 7 X 7/8 70 GRIT	6012.63
S945003	50 PACK GENESIS 7 X 7/8 120 GRIT	5236.57
S945005	25 PK SUPER-EDGE™ 5" 50 GRIT SNAILOCK	3082.57
S945006	25 PK SUPER-EDGE™ 5" 120 GRIT SNAILOCK	3082.57
S945007	25 PK SUPER-EDGE™ 5" 220 GRIT SNAILOCK	3082.57
S945008	25 PK SUPER-EDGE™ 5" 400 GRIT SNAILOCK	3082.57
S945009	25 PK SUPER-EDGE™ 5" 600 GRIT SNAILOCK	3082.57
S945010	25 PK SUPER-EDGE™ 5" 800 GRIT SNAILOCK	3082.57
S945011	25 PK SUPER-EDGE™ 5" 3500 GRIT SNAILOCK	3082.57
S945012	150 PK. BUFFING DISC FELT 4" X 1/2" LOOP	2415.18
S945015	50 PK. SUPER-EDGE™ 4" 220 GRIT SNAILOCK	3205.60
S945019	25 PK DIA-GLO™ MARBLE 10 LITRE	8150.98
S945029	200 PK DIA-GLO™ MARBLE 1 LITRE	8280.36
S945035	25 PK SUPER-EDGE™ 5" 1800 GRIT SNAILOCK	3082.57
S945043	200 PK DIA-GLO™ DARK GRANITE 1 LITRE	7452.32
S945048	50 PK STRAIGHT-EDGE 4" GRIT #2 SNAILOCK	7360.29
S945050	50 PK STRAIGHT-EDGE 4" GRIT #1 SNAILOCK	7360.29
S945059	200 PK DIA-GLO™ LIGHT GRANITE 1 LITRE	5467.97
S9750208	SLABMASTER 8" #8 FOR MARBLE FELT	130.19

Order ONLINE at www.abrasive-tech.com or Call USA: 1.800.964.8324 • Outside USA: 1.740.548.4100 • Fax: 1.740.548.7617

ORDERING AND RETURN MERCHANDISE POLICY

TO PLACE AN ORDER:

ORDER ONLINE at www.abrasive-tech.com
Email: csr@abrasive-tech.com
Phone: 1.740.548.4100 • Fax: 1.740.548.7617
Mail: 8400 Green Meadows Drive N.
Lewis Center, Ohio 43035 • USA

PROVIDE THE ORDER DESK WITH:

1. Your customer number
 2. Product type, stock number, and quantities
 3. Dollar value of all stock orders must meet the minimum order requirement of \$50.00.
- *All "special orders" require a \$200.00 net minimum.

FOR ALL OTHER INQUIRIES:

Email: csr@abrasive-tech.com
Phone: 1.740.548.4100 • Fax: 1.740.548.7617

DELIVERY:

Orders for in-stock products placed by 11:30 a.m. EST will ship same day. Shipping for non-stock products is quoted per order.

TERMS:

Credit card payments will be processed through PayPal using Mastercard®, Visa®, Discover®, or American Express®. Net 30 days from the date of invoice with approved credit or prepayment.

All prices are F.O.B. Lewis Center, OH for domestic shipments or EXW Lewis Center, OH USA for international shipments. All shipping and related charges will be added to the invoice.

RETURN MERCHANDISE POLICY:

Please refer to the Policies drop-down menu on our website at www.abrasive-tech.com for our Return Merchandise Policy or contact one of our Customer Service Team Members for assistance.

PRICES AND PRODUCT SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

AT is not liable under any circumstances for any direct, indirect, special, consequential, or incidental damages (including lost profits) in any way relating to the merchandise or to this agreement.



WORLD HEADQUARTERS

8400 Green Meadows Dr. N.
P.O. Box 545
Lewis Center, Ohio 43035 USA
P: 1.740.548.4100
F: 1.740.548.7617

EUROPEAN HEADQUARTERS

Unit 11 Boundary Business Ct.
92-94 Church Rd.
Mitcham, Surrey CR4 3TD UK
P: + 44 207 4710200
F: + 44 207 4710202

Go to www.abrasive-tech.com to order online or find a distributor near you.



WORLD HEADQUARTERS
United States
P: 1.740 548.4100
F: 1.740 548.7617

EUROPEAN HEADQUARTERS
United Kingdom
P: +44 207 471.0200
F: +44 207 471.0202

Go to www.abrasive-tech.com to order
online or find a distributor near you.

© 2022 Abrasive Technology

REV 1.2022